



Pitching Instructions - Artemis Canopy

Pitching Instructions

- Assemble the poles; 4 steel uprights, 4 steel corner pieces and 2 steel curved roof poles.
- Insert the curved roof poles through the colour coded sleeves on the canopy.
- Attach the upright poles to the roof poles.
- Locate one end of the poles in ring & pin system as **Figure 1** below.
- Stand the canopy upright and locate other pole ends on to corresponding pin system on the flysheet.
- Tension the webbing strap at the pole ends, and attach pole clips to poles.
- Position the fabric end of canopy towards tent.
- Secure in position by attaching the top webbing strap pole clips to the second pole of the tent and the lower webbing strap pole clips to the first pole of the tent.
- Peg out the front of the canopy to tension the material.
- Peg out **ALL** peg points including rings as **figure 2**, and peg out **ALL** guy lines.

The Vango Artemis Canopy is designed for use in lowland sheltered campsites. Do not pitch in high winds or exposed campsites.

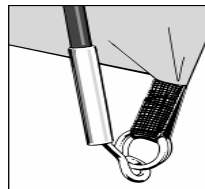


Figure 1.

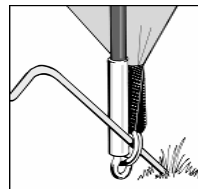


Figure 2.