



Pitching Instructions Colorado 600DLX & 800DLX (Inner)

INNER ATTACHMENT

- Open out inner tents inside flysheet and position doorways to correspond with the living area, porch, and entrance of the flysheet.

There are colour coded toggles on the inner tents, and inside of the flysheet, to help attach inners in the correct location.

- Starting from the rear corners of the inner tent, attach the inner clips to corresponding rings on the groundsheet.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet.
- Finally, connect the pelmet to the inner tent using the toggle and ring on each side.

COMBINED PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- **If pitching with inner and flysheet combined it is necessary to obtain assistance to avoid undue strain on poles and tent material.**
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

GROUND SHEET

- Side zips in the front porch allow the groundsheet to be rolled back if the door is being used in wet weather thus keeping your sewn in groundsheet dry.
- The groundsheet can also be lowered at the doors by undoing the toggle attachment.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute.

Calls from mobile phones, cable networks or public payphones will generally cost more