

### Pop-Up Pitching

- Remove tent from the bag and carefully remove the attached elastic strap.
- The tent will now be free to pop open.
- Position the tent in the required direction and peg out the corners of the flysheet so that the groundsheet is taut.

