



Tent Pitching Instructions Halo 200 & 300



Flysheet First Pitching

1. Assemble poles and lay them parallel on the ground. All three poles are the same length and diameter.
2. Open flysheet on ground and position tent in desired direction.
3. Locate pole sleeves on outside of flysheet and insert all poles.
4. Locate one end of each main pole into corresponding eyelets on pole anchor straps.
5. From the opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps.
6. Tighten up both of the tension straps, located at the base of the poles.
7. Peg the tent at the base of each pole.
8. Peg out the porches by pulling them out and pegging through the elastic loop.
9. Attach flysheet clips to poles
10. Peg remaining flysheet pegging points.
11. Peg out ALL guy lines.

Inner

1. Open out inner tent inside flysheet and position doorways to correspond with porch.
2. Starting from the top, suspend the inner by attaching toggles of inner tent with rings on inside of flysheet.
3. At each corner, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
4. Align the porch groundsheet and clip / peg into place, see diagram below for locations.

