



Pitching Instructions – Monte Verde 700 & 900

FLYSHEET FIRST PITCHING (Sewn in groundsheet)

- Assemble poles and lay them parallel on the ground.
- 10 steel uprights, 5 steel curved roof poles, and 10 angled joining pieces.
- Open flysheet on ground and position tent in required direction.
- Ensure the flysheet doors are closed when pitching the tent.
- Locate pole sleeves on roof section of flysheet and insert the curved roof poles.
- Attach the angled joints to the roof poles.
- Insert upright poles into the angled joining pieces.
- On both sides of the tent, loosen the tension straps and locate the ends of each pole into the corresponding ring & pin.
- Attach the clips to the poles and tension the pole end straps.
- Lay pole arches on the ground. The front of the tent should be face down with the back of the tent on top.
- Peg out adjustable anchor straps at both corners of rear end of tent using the V-pegs supplied.

With one person at each side of the tent gather all the poles together and lift into the upright position

- Pull flysheet forward, away from pegged points, until tent takes shape. Peg the two anchor straps at the front doorway using the V-pegs.
- At this point ensure that all the poles are in line with each other and that the tent is sitting square.
- Peg down all pole positions through the metal rings using pin-pegs – take care that the poles are aligned with the adjacent seams.
- Peg down remaining flysheet pegging points using pin-pegs.
- Peg out **ALL** guy lines using pin-pegs.
- The front door has an extra PE flap which should be tucked under the porch groundsheet as an extra seal against rain or wind entry.

INNER ATTACHMENT

- Open out inner tents inside flysheet and position doorways to correspond with the living area.
- Webbing straps with buckles at top of inner are colour coded. Clip buckles to corresponding coloured roof buckle.
- Starting from the rear corners of the tent, attach the inner clips to the corresponding rings on the flysheet.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet. Do the rear first and work forward.
- The wardrobe pole should be attached to the hanging pole clips in the 2 person inner tent.
- The additional 2 person inner tent can be placed either in the living area or the porch area of the tent.

Ring and Pin System.

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. (See Figure 1). Push the pole into a curve from the the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. (See Figure 2).

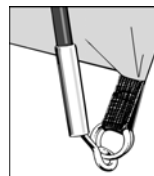


Figure 1.

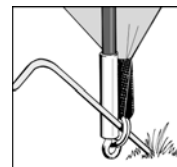


Figure 2.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.