




Tent Pitching Instructions – Peace Tepee

- **Poles - 1 long main pole, and 2 shorter door uprights.**
- Open out tent and position in required direction
- Peg down the two centre anchor straps and the single anchor strap at the rear.

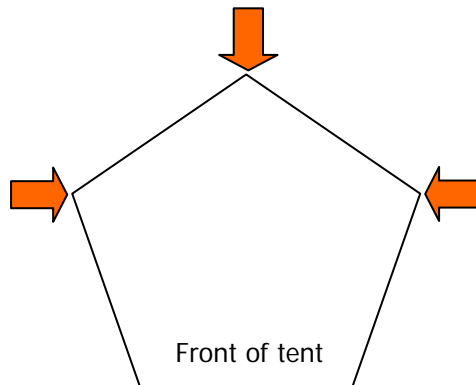

- Assemble the single long pole.
- Open the tent door, and from inside the tent, insert the pole into the reinforced patch in the roof. Standing the pole upright, place the opposite end of the pole on the reinforced square at the centre of the ground sheet.
- The tent should now stand upright.
- Close the door, then peg down the remaining two anchor straps at the front of the tent.
- Some re-pegging of anchor straps may be necessary to get groundsheet flat and tight.
- Peg the remaining elasticated pegging points around the base of the flysheet.
- Peg out ALL guy lines, ensuring that they are in line with the seam they are attached to.
- The front door has a number of options. With the side fillets unzipped and rolled away then the front door can be rolled up or poled out on the king poles. One or both of the side fillets can be zipped in place when the door is poled up to create a sheltered area.
- To roll away the mesh door both the vertical and horizontal zips need to be unzipped.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.