



Pitching Instructions – Salonga 600 & 900

FLYSHEET FIRST PITCHING (Sewn in groundsheet)

- Assemble poles and lay them parallel on the ground.
- **8 long steel uprights, 4 long steel curved roof poles. 4 shorter steel uprights, 2 shorter curved roof poles. 2 fibreglass roof dome poles.**
- Open flysheet on ground and position tent in required direction.
- Ensure the flysheet doors are closed when pitching the tent.
- Locate pole sleeves on main roof section of flysheet and insert the long curved roof poles.
- Insert long upright poles into roof poles.
- On both sides of the tent, loosen the tension straps and locate the ends of each pole into the corresponding ring & pin.
- Attach the clips to the poles and tension the pole end straps.
- Lay pole arches on the ground. The front of the tent should be face down with the back of the tent on top.
- Peg out adjustable anchor straps at both corners of rear end of tent using the V-pegs supplied.

With one person at each side of the tent gather all the poles together and lift into the upright position

- Pull flysheet forward, away from pegged points, until tent takes shape. Peg the two anchor straps at the front doorway using the V-pegs.
- At this point ensure that all the poles are in line with each other and that the tent is sitting square.
- Peg down all pole positions through the metal rings using pin-pegs – take care that the poles are aligned with the adjacent seams.
- Locate pole sleeves on side porch section of flysheet and insert the short curved roof poles.
- Insert short upright poles into porch roof poles.
- On both sides of the porch, loosen the tension straps and locate the ends of each pole into the corresponding ring & pin.
- Attach the clips to the poles and tension the pole end straps.
- Pull porch forward, away from main body of tent, until it takes shape. Peg the two anchor straps at the front doorway using the V-pegs.
- Peg down remaining flysheet pegging points using pin-pegs.
- Peg out **ALL** guy lines using pin-pegs.
- Insert the 2 fibreglass support poles, diagonally into the roof of the living area. The ends fit into pockets, and the poles are secured with Velcro strips.

INNER ATTACHMENT

- Open out inner tents inside flysheet and position doorways to correspond with the living area.
- Webbing straps with buckles at top of inner are colour coded. Clip buckles to corresponding coloured roof buckle.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet. Do the rear first and work forward.
- Insert the wardrobe pole into the pole clips in the living area inner tent. The inner can be packed into the attached pocket on the side of the flysheet when not required.

Ring and Pin System.

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. (See Figure 1). Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. (See Figure 2).



Figure 1.

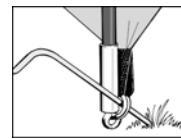


Figure 2.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.