



Tent Pitching Instructions Spectre 200 & 300

Flysheet First Pitching

1. Assemble the three poles and lay them parallel on the ground. One pole will be longer than the other two. The poles are colour coded to link with colour of pole sleeve end binding
2. Open flysheet on ground, check the internal tension bands are un-clipped and position tent in desired direction.
3. Locate pole sleeves on outside of flysheet and insert poles.
4. On one side, locate the end of each pole into corresponding eyelets on pole anchor straps.
5. On opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps.
6. Peg out the single adjustable anchor strap at one end of the tent.
7. Pull flysheet taut from other end until tent takes shape. Peg the opposite anchor strap.
8. Tighten up the tension straps at the base of each pole
9. Peg down pole anchor straps and remaining flysheet pegging points.
10. Peg out ALL guy lines.

Inner

1. Open out inner tent inside flysheet and position so that doorways on inner and fly line up.
2. Starting from one side of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet. Suspend the inner by attaching hooks of inner tent with rings on inside of flysheet.

Tension Band System

1. Insert tension bands through corresponding access points in inner tent (ceiling and sidewall). Connect the straps into the side-release buckles.
2. Adjust the tension of the TBS straps until the slack is taken out - EXCESS TENSION WILL ALTER THE SHAPE OF THE TENT AND MAY PERMANENTLY DISTORT POLES.
3. Tension band pockets are provided for storage when not in use.

