



Tent Pitching Instructions Vitesse

Pitching

1. Assemble the two poles and lay them on the ground. The longer pole is for the front of the tent.
2. Open flysheet on ground and position in desired direction.
3. Locate each pole into the socket on the roof and position into the webbing square on the groundsheet.
4. Peg out groundsheet using the adjustable webbing loops.
5. The elastic shockcord points around the flysheet can then be looped over the pegs.
6. Pull the tent forwards until taut and peg out the door.

Alternative Pitching Methods

1. The webbing loops at the front and rear of the ridge can be used to suspend the tent from trees or other objects.
2. Walking poles can be used in place of the alloy poles. Insert the poles, adjust and lock at the correct height.