



## Tent Pitching Instructions – Zetes 200, 300 & 400

### FLYSHEET FIRST PITCHING

- Assemble the 2 poles and lay them parallel on the ground.
- Open out flysheet and position in required direction.
- Insert the poles through the pole sleeves on the outside of the flysheet.
- Locate one end of each pole on one side of flysheet, into the metal pin system at the end of the pole sleeves. Push poles into an arch from opposite ends and locate pole ends into corresponding metal pin.
- Start pegging out the main corners at one end of the tent using the pin pegs provided.
- Pull the tent forward until taut and peg out the main corners at the other end of the tent, again with the pin pegs.
- Ensure the tent is in a straight line.
- Secure the tent using the pin pegs through the ring & pin system – see diagram below.
- Peg out ALL guy lines, ensuring that they are in line with the seam they are attached to. Pole guylines should be pegged at an angle towards front, and back, of tent, to tension roof panel.

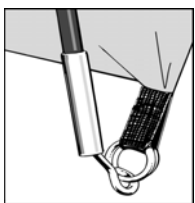


Figure 1.

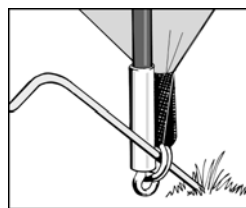


Figure 2.

### INNER ATTACHMENT

- Open out the inner tent inside the flysheet and position doorway to correspond with front of the tent.
- Starting from the rear corners of the tent, attach the hooks on the inner tents to the corresponding rings on the inside of the groundsheet.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet. Do the rear first and work forward.
- Pull the groundsheet forward ensuring it is taut and wrinkle free.
- Secure the ground sheet at the front of the tent by attaching it to the rings on the inside of the flysheet.

### COMBINED PITCHING

- The inner can remain attached to the flysheet when packing the tent after use, but always check that toggles and clips are still attached when re pitching
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

#### Ring and Pin System

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.