



Tent Pitching Instructions Apex 200



Flysheet First Pitching

1. Assemble the two poles and lay them on the ground.
2. Open flysheet on ground and position tent in desired direction.
3. Locate black pole sleeve running along length of flysheet and insert longer pole.
4. Locate one end of the pole into corresponding eyelet on pole anchor strap.
5. Push pole into an arch from opposite side and locate pole end into corresponding eyelet.
6. Tighten the flysheet by adjusting the tension strap at the base of the pole.
7. Peg out adjustable anchor straps at corners of the tent.
8. Connect apex pole into the three corresponding eyelets.
9. Peg down the remaining flysheet pegging points.
10. Peg out both guy lines.
11. Peg down the front of the inner tent.

The inner tent and flysheet can remain attached when pitching or packing. However, in humid or very wet weather, the underside of the flysheet may be coated with condensation. If this occurs, it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming wet.

Inner Tent (if previously removed)

1. Open out inner tent inside flysheet and position doorway to correspond with the porch entrance of the flysheet.
2. Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet.
3. Suspend the inner by attaching elastic of inner tent with clips on inside of flysheet

Tension Band System

1. Remove Tension Band System from pockets at apex of poles. Hook the rings at the end of each line over the ends of the poles at the base of the tent
2. DO NOT OVERTENSION. Excess tension will alter the shape of the tent and may permanently distort the poles.

