



Tent Pitching Instructions – Artemis 400, 500 & 600

FLYSHEET FIRST PITCHING – Groundsheet is sewn-in

- Assemble poles and lay them parallel on the ground.
- 3 curved steel roof poles, 6 steel upright poles, and 6 angled joining pieces.
- Open out flysheet and position in required direction.
- Ensure the flysheet doors are closed when pitching the tent.
- The poles and joining pieces are colour coded to match the coloured tab on the pole sleeve.
- Locate pole sleeves on roof section of flysheet and insert the curved roof poles.
- Attach the angled joints to the roof poles.
- Insert corresponding upright poles into the angled joining pieces.
- On both sides of the tent, loosen the tension straps and locate the ends of each pole into the corresponding ring & pin.
- Attach the clips to the poles and tension the pole end straps.
- Peg out adjustable anchor straps at both corners of rear end of tent using the V-pegs supplied.
- Pull the tent forward until taut and peg out the main corners at the other end of the tent, again with the steel V pegs.
- Ensure the tent is in a straight line. The groundsheet should be flat and wrinkle free.
- Secure the tent using the pin pegs through the ring & pin system – see diagram below.
- Peg out ALL guy lines, ensuring that they are in line with the pole or seam they are attached to.

INNER ATTACHMENT

- Open out inner tent inside flysheet and position doorway to correspond with the living area.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet. Do the rear first and work forward.
- Attach the base of the pelmet to the attachment points on the front of the inners.
- The inner divider can be attached by inserting the toggles through the rings on the inner tent (500& 600 only).

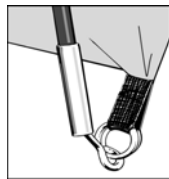


Figure 1.

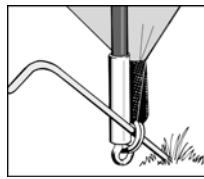


Figure 2.

Ring and Pin System

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.