Tent Pitching Instructions – Nevis 800

FLYSHEET FIRST PITCHING – Groundsheet is sewn-in

- Assemble the 6 poles and lay them parallel on the ground. 5 main poles; 3 long, & 2 medium, and 1 short brow pole. The poles are colour coded to match corresponding pole sleeve entry points.
- Open out flysheet and position in required direction.
- Insert the poles through the colour coded pole sleeves on the outside of the flysheet.
- Locate one end of each pole on one side of flysheet, into the metal pin system at the end of the pole sleeves. Make sure poles locate into correct pin system (all poles follow corresponding flysheet seams to pin system). Loosen any tensions straps on the pin system
- Push poles into an arch from opposite ends and locate pole ends into corresponding metal pin. Tighten the tension straps at the pole bases.
- Start pegging out the tent using the main corners at one end of the tent using the steel V pegs.
- Pull the tent forward until taut and peg out the main corners at the other end of the tent, again with the steel V pegs.
- Ensure the tent is in a straight line. The groundsheet should be flat and wrinkle free.
- Insert brow pole above side door, inserting ends into pockets on flysheet.
- Attach all flysheet pole clips onto poles.
- Secure the tent using the pin pegs through the ring & pin system – see diagram below.
- Peg out ALL guy lines, ensuring that they are in line with the pole or seam they are attached to.
- The groundsheet can be lowered at the doors by pegging down the elastic loops.

INNER ATTACHMENT

- Open out inner tents inside flysheet and position doorway to correspond with the living area.
- The larger 4 person inner fits in the end of the flysheet with the door.
- The inners have colour coded toggles to assist with positioning.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet. Do the rear first and work forward.
- Attach the base of the pelmet to the attachment points on the front of the inners.
- The optional inner divider can be attached by inserting the toggles through the rings on the inner tent.

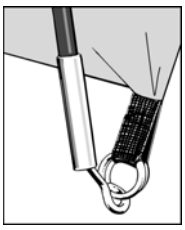

Figure 1.

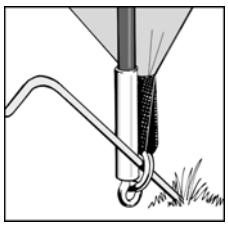

Figure 2.

Ring and Pin System

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1).** Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2).**

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk
Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.